




*Annie*TM

Brass Annealing Induction Heater

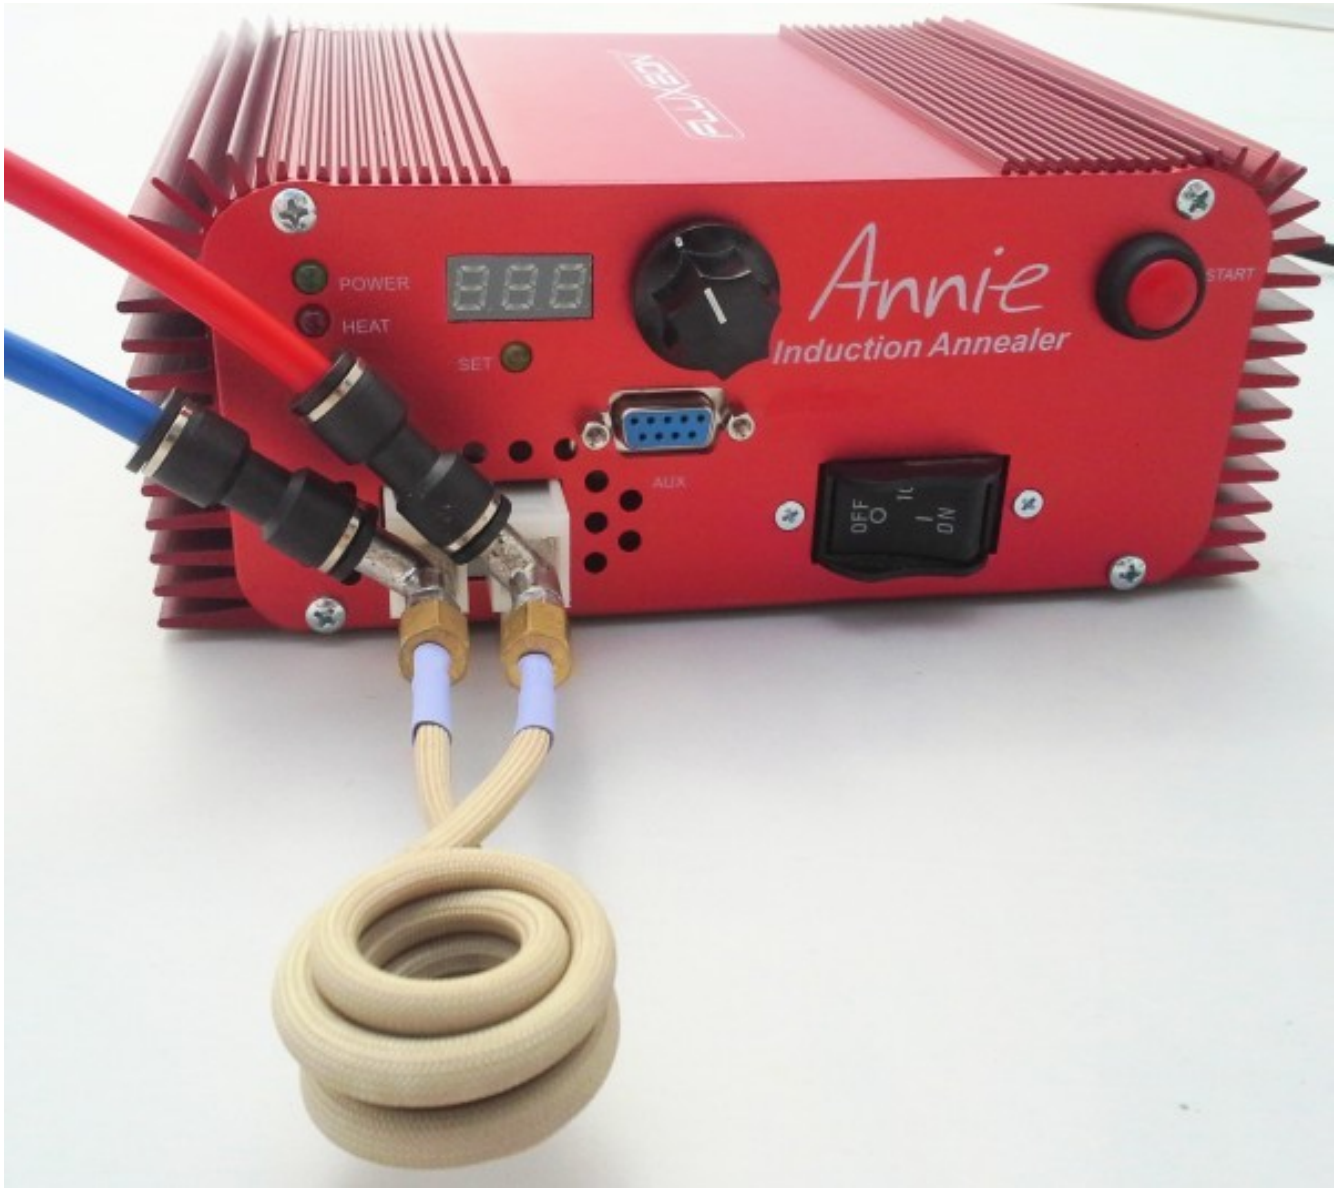

Manual Version 1.5

05/15/17

WARNING ▪ WARNING ▪ WARNING

Do **not** use this heater around your reloading bench.
While Annie emits no sparks nor flames, it can heat objects inserted into its work coil hot enough to ignite powder and primers.

Serious harm or death could result.

SET UP A SEPARATE AREA FOR ANNEALING BRASS

NEVER anneal a primed case!

While Annie is fast enough to leave the case head cool, a piece of hot debris could fall off the mouth and land in the primer hole, detonating the primer.

ANNEAL ONLY DE-PRIMED CASES!

WARNING ▪ WARNING ▪ WARNING

Safety Warnings

- **Do not get wet. This unit is not water resistant.** If the unit does get wet, unplug it as quickly as possible and allow to thoroughly dry before trying to use it again. Low heat (150F or less) is recommended to aid drying.
- This equipment contains sensitive electronics. Do not use this instrument to drive nails, break rocks or otherwise subject it to excessive shock or vibrations. Try not drop it any more than necessary.
- Do not heat anything other than ammunition brass with this unit. No aerosol cans, air tanks, or any container that is sealed. Yeah, it's fun to heat things until they blow up but please don't use Annie for that purpose!
- Do not heat anything flammable or anything that contains flammable materials or substances. Automobile gas tanks, for example.
- Do not use the radio frequency output for anything other than case annealing. No this isn't a cute little ham radio transmitter!
- Do not remove the 3rd wire safety prong. The earth ground is vital to this unit's operation, and **YOUR SAFETY.**
- Do not carry the unit by its cables.
- Do not open the case. No user-serviceable parts inside. Warranty will be voided if the case is opened. **Yes, we will know....**
- Do not tamper with the circuit breaker. It is not adjustable.
- This unit emits strong radio frequency (RF) energy. Please do not use it around other sensitive electronic equipment. In the factory, that means don't plug it into the same power serving an instrumentation, PLC or industrial PC cabinet.
- Annie's case may get quite hot during extended operation. The over-temperature protection triggers at 70 deg C (158 deg F). This is quite hot to the touch and can cause mild burns. If Annie must be operated for an extended period then we suggest setting up a fan to blow on the case.
- If any of the cords become frayed or cut, please return the unit to the factory for replacement.

Introduction

Thank you for purchasing an Annie brass annealer! You will discover that induction heating brass and steel cases to be a pleasant, fast and fun experience. Please read this manual in its entirety before operating Annie for the first time. (It's not that long....)

Setting Up for the First Time

When you open the shipping container you should find a fully assembled Annie. The heating coil (work coil) has been disconnected and packed carefully for shipping.

The Annie is sold apart from the coil, but they all connect to the front panel in the same way.

- To prepare Annie for operation, remove it from its packing material and attach the work coil to the front face terminals. Gently tighten the screws. **Note: 'Firm' is enough—don't tighten as if you need to ratchet it down.**
- **Re-tighten after your first 25 cartridges.** The solder-dipped ends will soften a little with use. If a good connection is compromised, the result will be a hot spot, and a melted connector.
- Attach the foot switch to the front panel connector and place it on the floor in a convenient location. After you finish reading these instructions, you are ready to start annealing your brass.

The Front Panel

Here is a photo of the front panel. The features are as follows.

- **Work coil connectors** – where the heating coil connects. Only use Fluxeon-provided coils. Any other type of coil will damage the Annie.
- **3-digit LED display.** Shows the time in tenths of a second that the timer is programmed to run.
- **“Set” LED.** Shows that the heater is in the “time set” mode. This mode is entered by pressing and releasing the “Set” knob.
- **“Heat” LED.** Shows when the induction heater is on.
- **“Set” knob.** This is a multi-function control. If you press and release it one time, Annie enters the “time set” mode. Turning the knob sets the desired time on the display. When the desired time is set, press the knob again (“set” LED goes out) and the heater is ready to run.

If you press and hold the “Set” knob for 4 or more seconds, the time setting is reset to “0.0”.

Note: the Maximum time for the Annie is set to 20 seconds. Most cartridges are annealed in under 3 seconds, 50BMGs in about 10 seconds.

- **“Start” button.** This switch turns the heating on and off and starts the timer count-down. If you press the “Start” button while a heating cycle is underway, the cycle is paused.
- **Foot Switch.** (optional) is wired in parallel with the “Start” button, and so functions identically.
- **Power Breaker.** This is the power switch for Annie. We recommend that Annie be left in the “off” position when the unit is not in use, but no harm will come if left on. It consumes about 5W while idle. On larger cartridges, the breaker may buzz. It's designed to put up with a small overload for a short time.
 - If Annie is overloaded, the breaker will trip. If it repeatedly trips then there might be something wrong with Annie. Contact support@fluxeon.com for troubleshooting.

Using Annie

Using the annealer is extremely simple.

- Switch on the breaker on the front panel. The heater will do an LED test and then recall the time from the last session if one was present.
- If the time is not correct, press and release the “set” knob (“set” LED illuminates) and adjust the time as necessary. Press the “set” knob again to exit the “set” mode.
 - Note: “20.0” seconds is a special setting (on some versions it's “999”). This allows for 'momentary' operation. This is not used in reloading where timing is important, but the Annie does occasionally get some odd jobs that need it.

******DOUBLE-CHECK TO MAKE CERTAIN THE CARTRIDGE IS NOT PRIMED******

- Insert a brass cartridge into the work coil approximately as deep as you want it heated. Normally that would be just the mouth of the case, especially for shouldered cases. For correct insertion depth, paint a line of Tempilaq along the length of the case, and observe where the melting happens first.
- Press the Start button to start the heat cycle. If you desire additional cycle speed, the Fluxeon Universal Foot Switch will be worth considering.
- The heating is so fast that you can hold most types of cases by the head. Annealing pistol cartridges will probably require gloves or a non-conductive holder.
- If you desire water quenching, drop the brass into a bucket of water. (However, this is not metallurgically necessary to the annealing process.)
- Repeat! Note that the power output will increase after the first 10 or so cartridges. This is because the internal transformer is warming up, which changes the output about 8%. so please give Annie a dozen or so ‘practice shots’ before firing for effect. Just put the first ten anneals back into the line to be annealed again (once they have cooled).
- If you are heating a large number of cartridges, and doing so at deafening speed, the thermal cut-out may kick in. The Start button or foot switch will still initiate a countdown on the timer, but no heat will be produced. You will see the HEAT LED turn blue/magenta when the fault is in effect. You will also hear a beeping noise from the Annie.

Go grab a cold one and let Annie cool off.

- For high duty-cycle operation, please use the water-cooled coil.

Heating Times

Most shouldered cartridges up through .30 cal and straight walled pistol cases will anneal properly in 2-4 seconds. Shouldered cartridges larger than .30 cal will require more time. A 50 BMG will require about 10 seconds—for larger cartridges, allow more time in between heats. If you're using the flux concentrator output head, larger calibers should be slowly rotated to ensure evenness of heating. No rotation is needed for the water-cooled helical coil, as it is self-centering from the magnetic field.

For best results, obtain a Tempilaq® temperature measuring liquid or crayon and vary the time until you get exactly the temperature you desire. 750F will indicate annealing, 800F will help to make sure you don't overshoot. Just paint a lengthwise line on the cartridge, which will also help with correct positioning. The tenth of a second resolution of the Annie timer is more than adequate for precision annealing.

- **Coil Options**

The Annie has several output coil options:

- **Water-Cooled Helical Coil.** The Water-Cooled Coil essentially gives the Annie virtually unlimited duty-cycle. The helical coil has the fastest cycle time of the three, and most even heat. The magnetic field will actually self-center the cartridge.

Connect the end to the white terminal block, just like the Litz coil.

You can position the water connections however you like—the copper is flexible.

You may have to re-tighten the compression fittings, but try not to overdo it. Over-tightening can also cause a leak.

The Water-Cooled Coil includes 25 feet of 1/4" poly tubing. Cut to the length desired, and insert the tube into the instant tube fitting on the coil. There is nothing to do except push the tube in. to release, push in the release ring, and then pull the tube out.

The water supply can be anything from tap water from the faucet, to pump-recirculated water. Only a dribble of flow is required, on the order of 1 gallon per hour. If you prefer to use a pump, the best choice is a diaphragm, gear or vane pump. You'll need about 5psi (or 3M of lift) to get the required flow. Fluxeon now offers a pump/reservoir—please check the web store!

- **Litz Wire Split Ferrite Flux Concentrator.** Now there's a mouthful! Let's just call this the **FC Coil** and make it easy on ourselves.



This coil is made of 1,750 strands of individually insulated 40AWG magnet wires, with a solid 12AWG core so that it keeps its shape. It will get warm, and can be ruined with too much usage so you'll have to go a little more slowly with this one.

It is, however, air-cooled and requires no water. It also features an open side, which some folks prefer.

The Annie FC coil kit comes with 4 ferrite halves, and hardware that bolts them together. The halves are color-coded according to cut size on the gap end. Mix and match until you get the right gap. The cartridge should be tight, but not touching the sides.

The white ceramic on the ends is solely present for spacing and getting the magnetic field even. If one comes off, you can reattach it with ordinary hardware store silicone.

For cartridges larger than 7.62mm, you'll want to rotate the cartridge 90 degrees as the timer counts down. It's not 100% necessary, but it will give a more even heat.

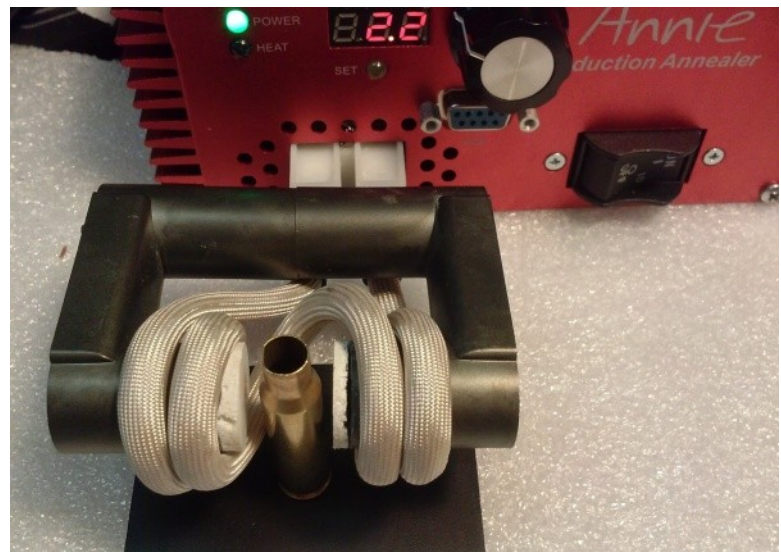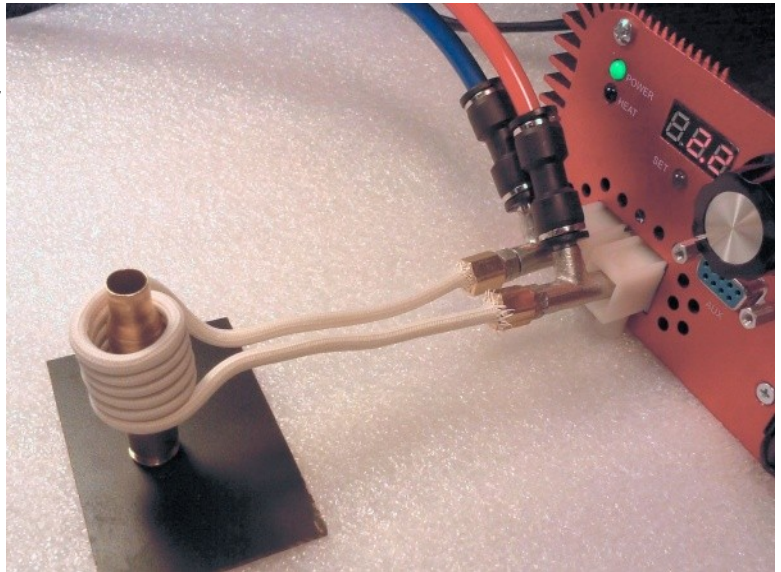

- **Giraud Retrofit Cut Toroidal Coil.**

This is a coil made specially for the Giraud automatic annealing machine. The toroid is the most efficient of the open-sided coils, and since the cartridge is rotated by the machine, no spacers are required. We feature water-cooled versions of the Giraud Coil, for those interested in very fast cycling. If you plan to anneal large cases such as 50BMG, you'll need the 3/4" gap version. Because the power levels are highest with these larger cartridges, we do recommend that you buy the water-cooled version of this coil.

Contact Giraud Tool Company for information on their adapter kit. For those of you who already have one, certain of the parts must be replaced with non-conductive materials so they don't induction-heat themselves. Also included in the kit is mounting hardware you'll need.

*****TIMING ISSUE***** please note that there is a timing sequence that must be observed with the Giraud system. The issue arises when the cycle time of the feeder is exceeded by the Annie timer. With the timer still counting down, the slide returns and triggers another 'start' signal. but doing this will cause the timer to stop. so the timer will show a frozen time setting until the slide returns to start the next cycle. this cycle will only get a partial heating since it's starting from where it was prematurely stopped.

If your cartridge needs a longer heat from the Annie, please slow down the Giraud feeder.

- **The Fluxeon Universal Foot Switch**

The Universal Foot Switch is compatible with the Annie. Use it to actuate the timer, same as pressing the 'Start' button. It will give you an extra free hand to move your brass.

- **The Water Recirculator/ Reservoir**

This is to supply water to the water-cooled helical coil. It's a half-gallon glass jar, with a pump and some flashy lights. It comes with 4oz of Anti-Corrosion Fluid. You need only 1 ounce to treat the whole half gallon jar. The anti-corrosion fluid also enables higher heat capacity and will remove heat more efficiently.

You can use any available water, but make sure it is particulate-free. The coil ID is very small and easily plugged up. For best results use filtered -preferably distilled- water. You will want to change the water out once every year.

The pump is not self-priming. Unprimed, it will sound like a bag full of sick cats—turn it off immediately if you hear that! Don't suck on any of the tubes to prime it--just make sure it's filled almost all the way to the top, such that the pump cavity is submerged. When the pump is properly primed, it is practically silent.

To prime the pump, simply prepare the coolant and screw the lid/pump on. Wait a minute or so, THEN connect the plastic tubes. There may still be some air trapped in the pump cavity, which can be eliminated by cycling power several times.

Don't forget to attach the included suction tube onto the center hose barb.

The Water pump/ reservoir should be adequate for most applications. The water might get very warm, but that's OK. If you hear bubbling in the coil during a heat cycle, it's time to take a break. You can get around this by putting a fan across the jar, by placing the jar in a bowl of ice cubes, or by putting a radiator and fan in the loop.

The newest revision of the Annie features an internal pump power supply. So it can be powered by plugging an included cable that connects the pump to the DB9 front panel connector.

Some Notes About FC Coil Overheating

The Annie has about a 50% duty-cycle. What does this really mean? At 100% power, it can only be on half the time. Since most cartridges will not draw full-power, and it takes time to move cartridges through, Annie is essentially a continuous-use machine. It features a thermal cut-out switch, but that only triggers when the case exceeds 70C. And that happens only in extreme circumstances.

The power supply is one factor, the coil is another. The FC Coil coil is made up of over 1,750 individually insulated strands of 40AWG wire. This is called "Litz Wire". Since electricity rides mostly on the surface of a conductor, the goal should be to have a conductor with the highest surface area possible. In a nutshell, this is the genius of Litz wire.

Coils are not *just* heated by heavy currents. The Annie coil can have well over 100 amps flowing at peak power. But, induction heating heats anything conductive in the field--including the coil itself. You'll notice that the portion of the coil closest to the ferrite gap will tend to get hotter first.

So it becomes necessary to monitor your usage of the Annie, not so much because of the power supply, but because of the coil. If you notice any smoke at all from the coil, that means the wire varnish is beginning to melt. Stop! Further use will damage the coil.

The current revision of the Annie includes an internal fan, which vents out the sides and the front, directly behind the coil mount. Make sure this airflow is not hampered or blocked by anything, and that it remains unclogged by 'dust bunnies'. If you cannot hear the fan, then please stop and contact us for repair.

For heavier, worry-free usage, we offer a water-cooled helical coil. It connects just like the Litz coil, but has two 1/4" instant-tube connections for a water hook-up. You can use any ordinary tap water- it does not need to be deionized or anything special. Since the flow rates required for cooling the coil are in the neighborhood of 1 gallon per hour, most users will see economy in just hooking up to a water faucet and sending the exiting water down the drain (or into the flower bed, etc.). Alternately, you may use a recirculating reservoir as complex as a refrigerated chiller, or something as simple as an aquarium pump and a bucket of water.

Fluxeon offers a simple, low-cost water recirculator/ reservoir that is a drop-in solution for this. See our web store for more details.

Care and Cleaning

Annie requires no routine maintenance. There are no user-serviceable parts inside Annie. The only care required is to make sure the fins are clear and unobstructed. If there is a dust built-up, please vacuum the vents. **Do not use compressed air, as that only blows the dirt inside Annie.**

If Annie gets wet, as long as the power is off, it will not be harmed. Simply let it dry before using. Set it in the window sill or some other sunny place. If you have any doubt at all that it's dry, please return it to us for service.

If Annie is powered up when it gets wet, immediately remove the power. If the spillage is beer, cola or anything else, then you should return Annie to the factory for a proper cleaning and testing. Get an RMA number from the web store, or email support@fluxeon.com.

(of course, you should be saving that adult beverage until AFTER annealing!)

Specifications

Rated input power	1200W	1200W
Rated input Current	10A	5A
Operating voltage	120 VAC \pm 10%	230V \pm 10%
Operating Frequency	45kHz, depending on load	45kHz, depending on load
Ambient operating temperature	50 – 110 deg F	
Storage Temperature	-10 – 160 deg F	
Duty cycle	Approximately 50%	
Maximum operating temperature	70 deg C.	

Technical Support

The **Fluxeon** crew is dedicated to supporting you the customer. The best way to get technical support is to email support@fluxeon.com. For non-technical support questions, email sales@fluxeon.com. We try to respond to requests within the hour during business hours and within a day regardless.

For telephone support, call us at *858-346-1900*. This call goes directly into voice mail that in turn pages the person doing support at that moment. Someone will get back to you as quickly as possible.

We are a small company and telephone support takes up a **lot** of time so if your problem isn't a genuine emergency, ***please use the email support***. Even when you telephone us, the support ticket is going to end up back in email so that you can send us photos and such, so you might as well start with email in the first place.

Returns

If you need to return your unit for service (in warranty or out) then you must contact us for an RMA number. Email is the best method of contact. Write the RMA number on the outside of the package in large numbers so that it is easily visible. The RMA number lets us track your problems and associate them with the machine when it arrives. Packages without RMA numbers may be returned to sender. Please include a sheet of paper with your contact information inside the box, just in case.

Limited Warranty

The Annie is covered by our limited lifetime warranty. Please visit <http://fluxeon.com/warranty.html> for all the warranty details.


Appendix A

Auxiliary Connector

The Annie features an auxiliary connector on the front panel.

This connector is designed to permit the remote control of Annie. The pinouts are as follows:

Pin Number	Function
1	5ms End-of-Cycle pulse with pin 4
2	No Connection
3	No Connection
4*	Isolated Ground
5	12V Pump +pos 450mA MAX
6	No Connection
7	No Connection
8*	External Switch in **
9	12V Pump -neg 450mA MAX

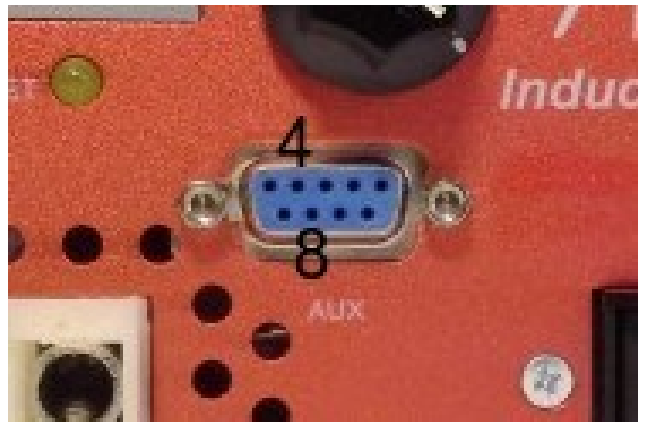

* Pins 4 and 8 turn on the Annie when shorted (switched). It is wired in parallel with the Start button on the front panel.

** Pins 4 and 8 are for connection to an external switch such as The Fluxeon Universal Foot Switch, or any other physical switch. Note, that this cannot be switched by a triac or solid-state relay. It must be a physical contact or mechanical relay. If you have an SSR output on your controller, just have it turn on a small-signal relay, and connect the Annie to that.

Notes